

Install multi-fixed Handles - Back to Back

What are multiple fixing points?

Multi-fixing is when there are 2 or more fittings in the rear of a handle.



These instructions are suited to

Any back-to-back square or rectangular handle set that has multiple fixing points and is supplied with bolts, including:

- Lineal, Bodo
- Hira
- Hiku
- Tri-pull
- Squircle

Fittings

Joinery & door handles are supplied with all fittings required for fixing the handles to the door. Included in this set are:

- 2-3 Metal threaded inserts prefixed in the rear of one handle
- 1 handle with holes for fitting
- 2-3 Screws for each insert
- 2-3 Timber cover buttons or plugs



Safety

- Always follow the manufacturer's safety instructions when using power tools and adhesives
- Wear safety glasses throughout the installation

Step 1: Set up

You will need

- 4-12mm drill, depending upon the size of the fitting
- Allen key
- Safety glasses
- Handle set and supplied fittings


Step 2: Prepare the door

a) Measure the distance between each of the fittings. This is taken from the centre of the top fitting to the centre of the bottom fitting.



b) Locate and mark the top position for the handles on the door.

c) Mark the position for the bottom fitting according to the measurement taken in a).

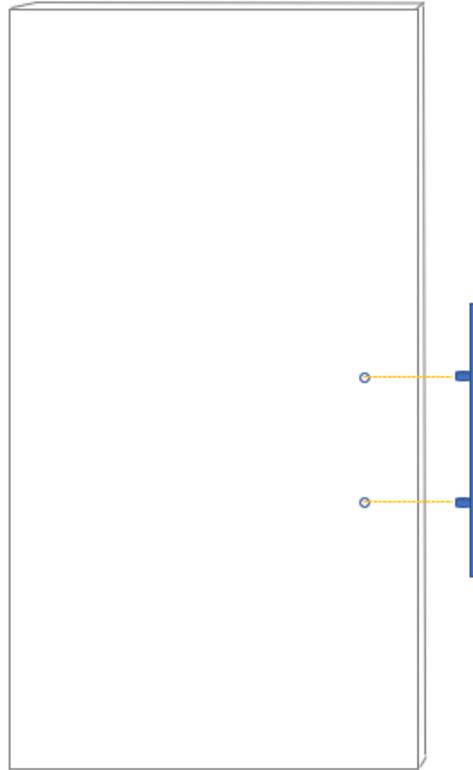

- d) Drill 4-12mm holes through the door at the points marked out above
**If your handles have 3 fixings, drill 3 holes*

Step 3: Prepare the handle fitting

- Select the handle with holes, i.e. without the metal inserts. This will be the rear handle.
- Insert the screws right through the handle face.



Step 4: Install

- a) Holding the handle, pass the screws through the predrilled holes in the door.
- b) Wind the top screw into the second handle, which will be on the other side of the door. Ensure it is properly aligned with the threaded insert.
- c) Repeat the same with the bottom screw (*& middle screw if supplied*).

d) Tighten the screws with the Allen key. Begin with the top fitting, then the bottom, then the middle (*if supplied*).

e) Press the cover plugs into place to conceal the fitting holes on the rear handle.



All Done!



Image credit: K Neely, VIC